


Do not confuse the receiver code switches with the red program switches on the gate control board.

Never set all code switches to the same position. Transmitters must match code switches for proper operation.

If power is taken directly from battery or connected as shown below, receiver should be configured for 12VDC

Ranch Code Receiver Wiring

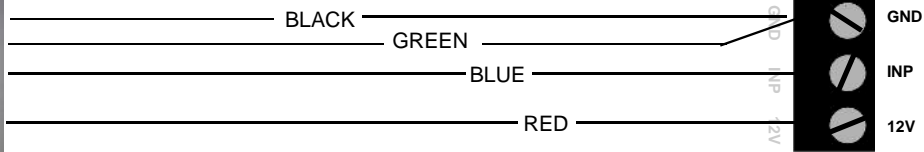

Ranch Code Receiver pre-wired with circuit board plug



Remove cover by sliding dip switch access door to the right



Set dip switch code on left to match transmitter



Ranch Code Transmitter Part # RCT



Slide dip switch cover down sets switch code



Remove battery saver tab



Set dip switch code on receiver to match transmitter and replace covers